


**Clockwise Rotation
Starter/Generator**

**Jumper From A1 To F1
A2 Is Ground
F2 Is Solenoid Connection**

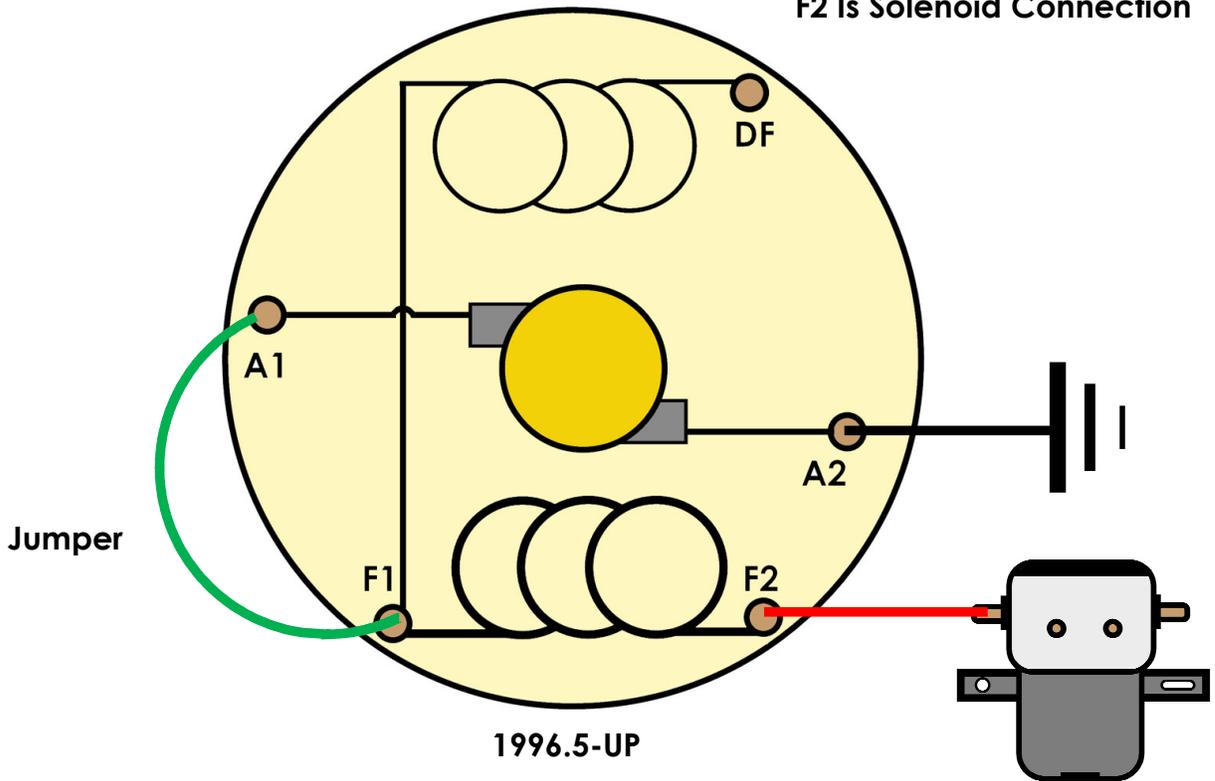

**Counterclockwise Rotation
Starter/Generator**

**Jumper From A2
To F1
A1 Is Ground
F2 Is Solenoid
Connection**

